

WARNING:

ADDED WEIGHT OF THE DEVICE MAY CAUSE INSTABILITY OF A FREE-STANDING PORTABLE LUMINAIRE.

USE ONLY WITH A PORTABLE LUMINAIRE THAT IS PROVIDED WITH A SHADE.

SUITABLE FOR USE IN ENCLOSED LUMINAIRES.

NOT FOR EMERGENCY LIGHTING.

AVERTISSEMENT:

LE DISPOSITIF CONSTITUE UN POIDS SUPPLÉMENTAIRE CE QUI PEUT CAUSER L'INSTABILITÉ D'UN LUMINAIRE PORTATIF AUTONOME.

UTILISER UNIQUEMENT AVEC UNE LAMPE DE TABLE DOTÉE D'UN ABAT-JOUR.

ADECUADA PARA USARSE EN LUMINARIAS CERRADAS.

NE CONVIENT PAS AUX SORTIES DE SECOURS.

LED Corn Light Instruction



Can not use the electric generator to test the LED lamp. Please avoid using the led fixture in environment where there is smoke, sulfur, and corrosive substances. But if used in such environment, make sure the led fixture is well protected by an enclosed lampshade whose dimension is no less than below size, and whose material is either glass or semi-glass, semi-metallic. Surface of the lampshade shall not have any covering which prevents heat dissipation.

Power (W)	12	18	27	36	45/54	75
Volume (CM)	30*18*18	32*19*19	34*20*20	38*20*20	42*21*21	42*23*23

Power (W)	100	120				
Volume (CM)	44*24*24	44*26*26				

 
LED Corn Light Instruction

Product features:

- ◆ 360 degree lighting.
- ◆ Can be with Clear or frosted PC cover.
- ◆ No fan.
- ◆ 12-120W lamp can be with AC100-277V internal driver.
- ◆ Isolated driver for 12-120W, non-isolated driver for 100-120W.
- ◆ 12-120W Sealant pouring for whole driver and lamp plastic housing.
- ◆ Long lifespan and good heat dissipation.
- ◆ Direct replacement for Metal Halide, easy Installation.
- ◆ Fits many different fixtures to replace traditional lamps.

Application:


Widely used in supermarket, warehouse, garage, home, office, hotel, hospital, school, street, garden etc.

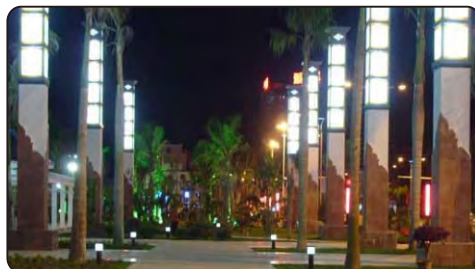


Installation Instructions:

Warning: Please make sure the power is off before installation.

 
1. Turn off the power switch.
2. Screw off the CFL or MHL or HPS and so on, see Figure (5)(6).
3. Take out led corn light and screw on, see Figure (1)(2)(3).
Figure (1)(2) (3) (4):AC internal driver,
(Note: Pls make sure to take off the ballast before installing led corn light, otherwise the ballast will produce the resonance of high voltage and makes led corn light breakdown.)
4. If security rope provided, pls fix the rope on the lamp with hand, then fix the wire of other end on the shell, see Figure (4).
5. Turn on the power switch.(Finished!)

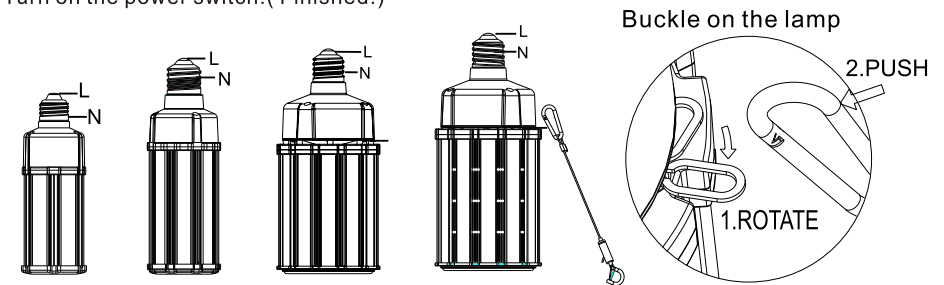

 Figure(1) Figure(2) Figure(3) Figure(4) Security Rope

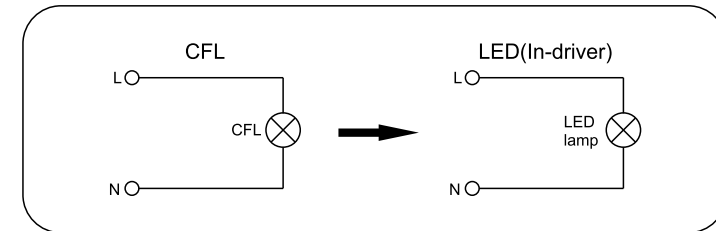

Figure(5)

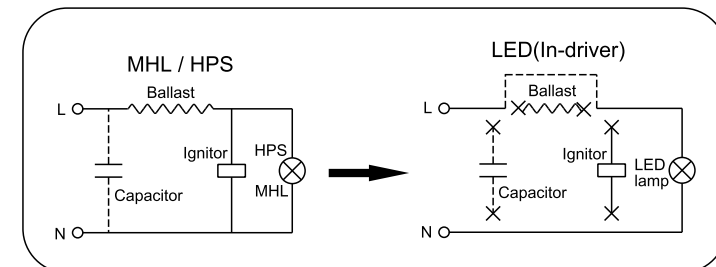 

Figure(6)